

# Technical Solutions Australia

## Product Information Sheet

### New Learning Switch Adapted TV Controller

PART No. AT-LRSW108E

PRICE AUD

GST \$0.00

INQUIRY DATE 21 Sep 2024



Learning Infrared TV Controller switch accessible

Requires Capability Switch, not included but can be purchased separately.

Channel Up, Channel Down and On/Off buttons are switch accessible. Just plug in your own switch or switches into the jacks, and the buttons on the remote will be activated. For example, if your adapted TV remote has a switch plugged into the "channel up" jack, then every time you press the external capability switch, the channel will increase by one.

Please note that it is a simple process to program this learning remote to work your TV, DVD or other infrared controlled appliance; detailed instructions enclosed.

Switches Pictured are not included, but sold separately- (Jelly Bean switches \$115.00 each)

Not limited to Power, Channel Up, Channel Down

Virtually any home appliance that has an infrared remote can be programmed into the Learning Infrared TV Controller. So it can also be used to control a CD player, radio or MP3 player. For a music player the three switches could be programmed to activate Play/Pause, Track Forward and Track Back.

Simple single switch operation

For those who can not handle multiple switches, a single switch can be used to access a single function - Here are some examples:

Program just one switch to the Track Forward button of a CD, DVD or MP3 player. Each time the switch is activated, the music will change.

Program just one switch to the Play/Pause button of a CD, DVD or MP3 player. Each time

*Prices correct at time of printing. Please confirm before ordering. Copyright ©2019 - Technical Solutions Australia - [www.tecsol.com.au](http://www.tecsol.com.au)*

# Technical Solutions Australia

## Product Information Sheet

the switch is activated, the music will start or stop.

Program just one switch to the Channel Up button of a TV. Each time the switch is activated, the channel will change.

125mm long x 50mm wide - white control buttons are approx 20mm oval shape, volume up down 30mm length

Optional Extra - Flexi Play/Pause - Makes a great Reward

Use the Switch Adapted Learning Infrared TV Controller with a music player and our Flexi Adaptor with play/pause to greatly assist students learning the cause-effect relationship between pressing a switch and the music player operating. The music will start when the switch is pressed then stop after say 20 seconds, thereby encouraging the user to press their switch again.