

Technical Solutions Australia

Product Information Sheet

Flexi Adaptor with Timer, Latch, Play/pause

PART No. FLEXP

PRICE AUD

GST \$17.73

INQUIRY DATE 26 Jun 2024



Our popular general purpose adaptor just got better

Our new Flexi Adaptor now has three different modes of operation to suit a wider range of uses. The Flexi Adaptor can be used with most low voltage switch adapted devices including battery powered toys, music players and other sensory devices.

Latching: The latching (on/off) function turns the controlled device on with the first switch press, and off with the second.

Flexi Timer: The timer will 'catch' a very brief switch closure and give an extended 'on time' which ensures an adequate reward for the switch press. This feature has been found to greatly assist students learning the cause-effect relationship between pressing a switch and the controlled device operating.

Play-Pause Timer: Great for music or video. When the user switch is pressed the Flexi output will pulse once to start the CD playing then after an adjustable time period, the Flexi output will pulse again to pause the CD. This can greatly assist students learning the cause-effect relationship between pressing a switch and the CD player operating. The music will start when the switch is pressed then stop after say 20 seconds, thereby encouraging the user to press their switch again.

The 'on time' can be adjusted from one second up to approximately 1 minute.

Switch Sold Separately

The Play/Pause mode has been designed to work with click-start, click-stop style devices, usually devices with a play/pause button - here are some examples:

Use the Flexi Adaptor (Play/Pause) in conjunction with the play/pause function of our Adapted CD player.

Prices correct at time of printing. Please confirm before ordering. Copyright ©2019 - Technical Solutions Australia - www.tecsol.com.au

Technical Solutions Australia

Product Information Sheet

Use the Flexi Adaptor (Play/Pause) in conjunction with our switch adapted mouse and computer to control the play/pause on windows media player or other software.

Use the Flexi Adaptor (Play/Pause) in conjunction with our Switch accessible Learning Infrared TV Controller to control the play/pause on a DVD player MP3 player, iPod dock or just about any music player that has a remote control with a play/pause button.